


Celt Star B

Model 1 F HP GC No. 51.980.33
2 F HP GC No. 51.980.34

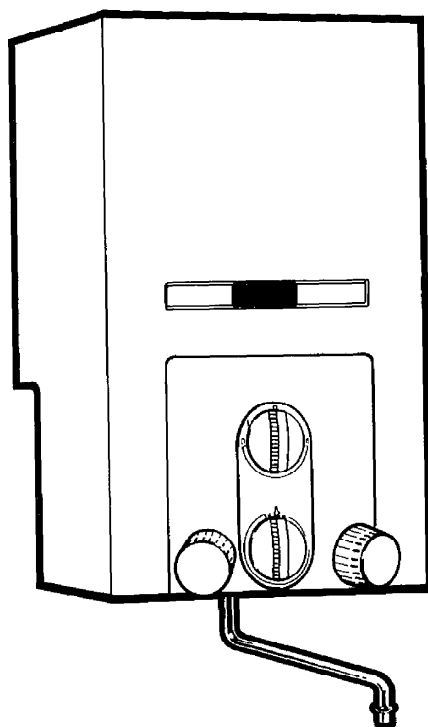

Celt Star B 1F HP

INSTRUCTIONS FOR USE

GAS SAFETY (INSTALLATION AND USE) REGULATIONS

In your own interest and that of safety, it is the law that all gas appliances are installed by competent persons in accordance with the Gas Safety (Installation and Use) Regulations 1984. If the appliance is installed in a compartment, do not obstruct any purpose provided ventilation openings, and do not use for storage purposes.





'GAS LEAKS OR FAULTS'

If a gas leak or fault is suspected, turn off the appliance and consult your local Gas Region or Service Engineer.

The model no. and serial no. of this heater are on the data badge which is found hanging at the rear left hand side beneath the appliance. These numbers should be used when ordering replacement parts.


THIS HEATER MUST NOT BE
USED CONTINUOUSLY FOR
PERIODS EXCEEDING
5 MINUTES.

TO LIGHT THE HEATER


- Turn on both water taps on appliance and/or remote taps when fitted.
Check that water flows freely through the appliance.
Close both taps on appliance and/or remote hot tap if fitted.
- With all taps closed, light the pilot by turning the gas control knob through  to the position marked  (fig. 1), a click should be heard and the pilot should now be alight. In the pilot, which can be seen through the window, does not light, leave the knob in this position for a few moments, then return the knob to the off position  and repeat.
- When the pilot is alight, wait 10 seconds then turn the gas control knob anti-clockwise slowly to the full gas position  (fig. 2).
The heater is now ready for use, and will light when the hot tap is opened.

If the pilot goes out, wait at least one minute and repeat operations a) to c).


TO TURN OFF FOR LONG PERIODS

If the heater is not required to be used for some time the pilot can be turned off. Turn the gas control knob clockwise to the position as shown in fig. 3 (i.e. off ).

TO TURN OFF FOR SHORT PERIODS

Turn the gas control knob clockwise to 

USING THE HEATER

Light the pilot as previously described and turn the gas control knob anti-clockwise to the position shown  (fig. 2).

Turn on hot water tap (left hand side adjacent to red dot).

Adjust temperature selector knob (fig. 4) on the water heater to the required temperature. To obtain hotter water, turn the temperature selector clockwise.

The cold water tap (adjacent to the blue dot) is on the right hand side.

NOTE: Do not use water hotter than is necessary, it is preferable to reduce the temperature of the water by turning the temperature selector towards the left rather than adding cold water to the very hot water. This will reduce the possibility of the formation of scale in the heat exchanger.

User's Instructions

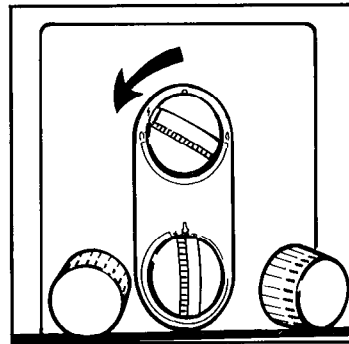


Fig. 1

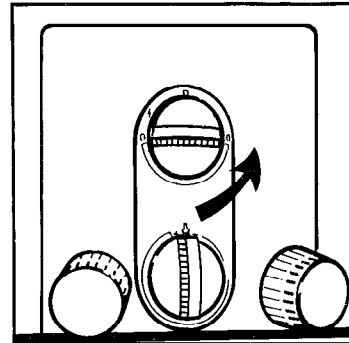


Fig. 2

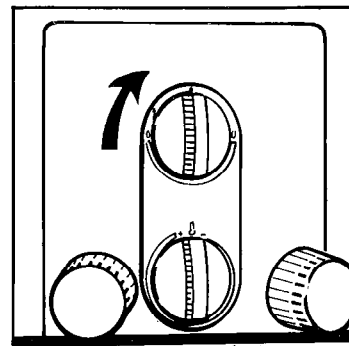


Fig. 3

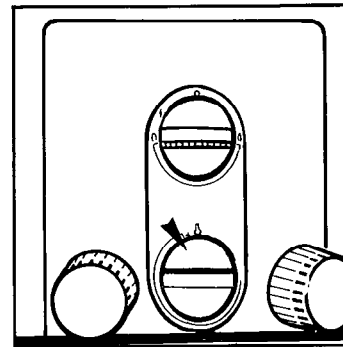


Fig. 4

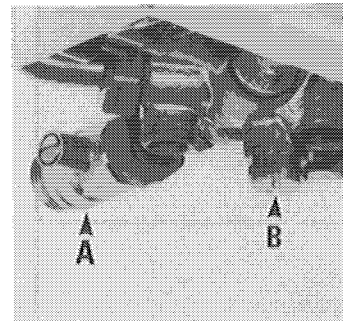



Fig. 5

FROST PRECAUTIONS

If there is any risk of freezing, e.g., if left unused during winter, the heater should be drained.

- Turn gas control knob to the off position .
- Turn off the cold water supply to the heater at the tap (A - fig. 5).
- Open hot water tap and cold tap if fitted.
- Remove the drain plug (B - fig. 5), which also retains the water governor and spring, and drain the water into a basin.
Take care to retain in a safe place the plug, governor and spring.

To restart the heater replace the drain plug complete with the governor and spring and open the cold water supply tap (A - fig. 5). Check that water flows through the heater before lighting the pilot.

SAFETY FEATURES

Your Celt Star is fitted with an atmosphere sensing device which must not be altered in any way.

- If the air in the room in which it is situated becomes depleted of oxygen the pilot light will be extinguished automatically.
- If the flue outlet is obscured or the heating body becomes blocked again the pilot will be automatically extinguished.

NOTE: If the pilot is extinguished during use the room should be ventilated before attempting to relight.

If the pilot will not operate in a satisfactory manner, seek advice from British Gas or other competent person.

CLEANING

To clean the case wipe with a damp soft cloth. **DO NOT USE ABRASIVE CLEANERS.**

SERVICE

To ensure that the heater continues to work efficiently and has a long life, it is important that it is serviced annually.

Ask your installer or local gas region for details of a regular service scheme.

This water heater has been tested and certified to EN26.

CLEARANCES AROUND YOUR WATER HEATER

These minimum clearances must be maintained for operation and servicing.

Top : 600 mm (24"). Bottom below case : 50 mm (2")
Sides : 75 mm (3"). Front : 250 mm (10")

For further information, ask your installer or contact Chaffoteaux Limited.

Keep in a safe place, near to the appliance.

SERVICE RECORD

Date	Work Carried Out	Name of Service Company

Imp SH Réf. 91120 125/01

CHAFFOTEAUX LIMITED
Concord House, Brighton Road,
Salfords, Redhill, Surrey RH1 6DX

Chaffoteaux 
Looking Good. Heating Better

ESP301 © Chaffoteaux Limited 1988